



# **OWNERS MANUAL**

**FOR WARMER/MERCHANDISER**

**MODEL:**

# **WARMER/MERCHANDISER**

For Nachos, Popcorn or Peanuts

**PART NUMBER:**

# **51000**

**INCLUDED:**


**OPERATING INSTRUCTIONS**

**SCHEMATICS**

**PARTS LIST**

**WARRANTY INFORMATION**

# Diagram

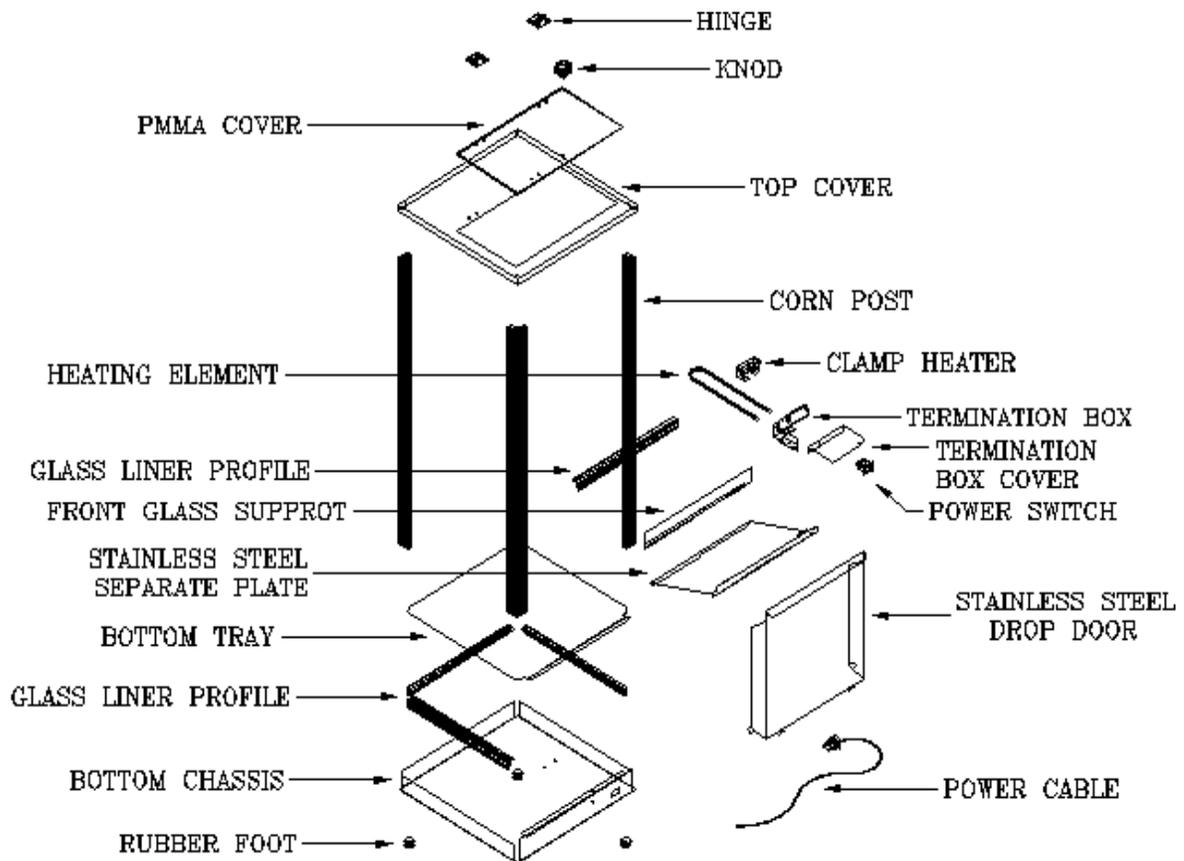


## Assembly Instructions

1. Attach Knob to the fill door using enclosed screw.
2. Attach Deflection board by sliding the tabs into the slots on the front corner-posts. Slide the board up and insert the tabs into the slots on the crossbar.
3. Insert the drop door by placing the tabs into the slots on the bottom tray.
4. Attach any of the enclosed signs to either the front or back (depending on merchandising position) using the two screws already in the corner posts.
5. Plug the machine into a properly grounded 120 volt outlet.
6. Fill the machine with product through the top fill door.
7. Turn on the warming element with the front lighted switch (the machine will be on when the switch is illuminated).
8. Turn the machine off when not in use.

## Cleaning

1. Turn off the machine and unplug it from the power source.
2. Remove any remaining food product from the machine.
3. Remove the Drop Door, Separate Plate and Bottom Tray from the Machine and clean in a sink or dishwasher with mild detergent.
4. Clean out any food product from the base of unit with a damp cloth and mild detergent.
5. Clean the glass panels and cover with any standards glass cleaner.
6. Re-assemble the machine.
7. Plug the machine back into the 120 volt power source.

## Wiring Diagram

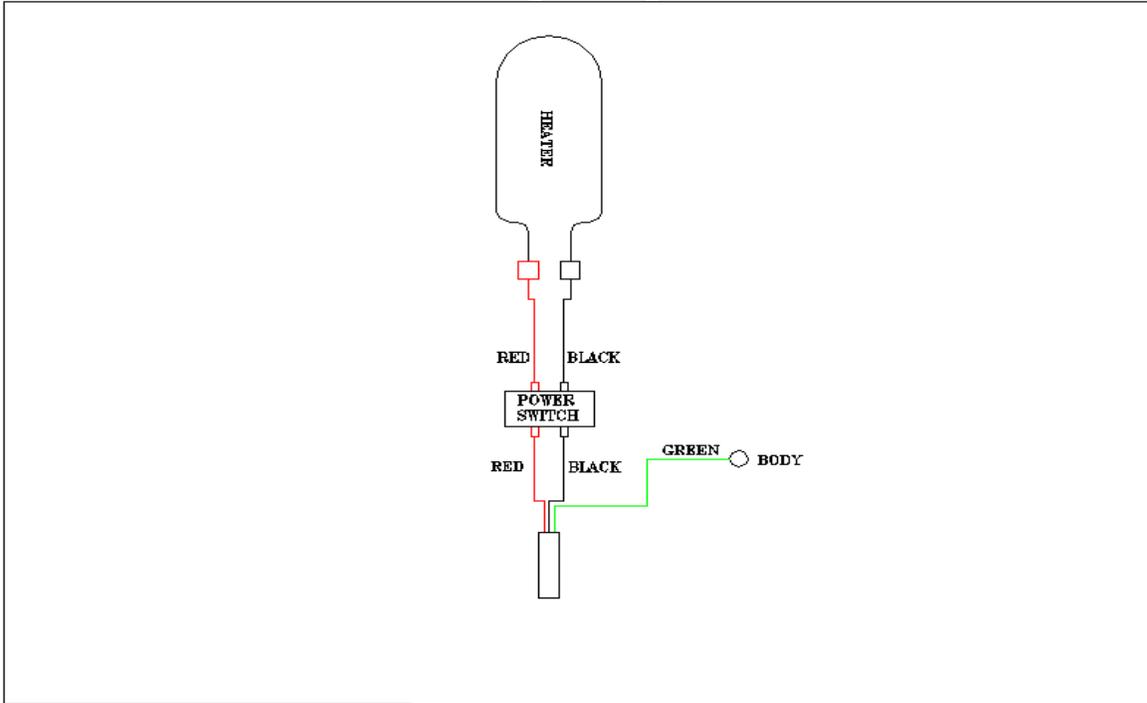

## Parts List

Part #	Description
4020	Hinge set
4031	PMMA Cover
1012	Clamp-Heater
1011	Heating element
5201	Knob

Part #	Description
5202	Bottom Tray
5203	Drop Door
5204	Separate Plate
2003	Master Switch - Lighted
5205	Glass Panel

### To Order Parts Contact:

**Benchmark USA, Inc.**  
 P.O. Box 475  
 Ames, IA 50010 USA  
 Tel: 515-232-5500  
 Fax: 515-232-5505  
 Email: [parts@benchmarkusainc.com](mailto:parts@benchmarkusainc.com)



## ***Three Year Warranty***

### **THE WARRANTY:**

Benchmark USA warrants the original purchaser of new food equipment manufactured by Benchmark USA to be free from defects in material or workmanship from the date of the original purchase for a period of three years.

### **WHO IS COVERED BY THIS WARRANTY:**

The original purchaser who has provided proper proof of the original retail purchase and all other requested information.

### **WHAT IS WARRANTIED:**

The obligation of Benchmark USA under this warranty is limited to the replacement of any parts or components that in the opinion of Benchmark USA are defective, F.O.B. the factory, or at any other location that Benchmark USA may designate.

### **WHAT VOIDS THE WARRANTY:**

1. Any piece of equipment that has been installed, operated or maintained inconsistently with Benchmark USA operating instructions.
2. Any part or component that has been modified, changed or altered from its original configuration.
3. Any electrical component that has been damaged due to submergence in any liquid.
4. Any part or component that has been subject to abuse, misuse, neglect or accidents.

### **EXTENT OF WARRANTY:**

Any defective component, part or assembly returned to Benchmark USA will be replaced by Benchmark USA. Benchmark USA will not be responsible for any expenses incurred by the customer under the terms of this warranty, nor shall it be responsible for any damages either consequential, special, contingent, or otherwise; or expenses or injury arising directly or indirectly from the use of a Benchmark USA product. Any component, part or assembly returned to Benchmark USA must be returned at the customers expense along with proof of purchase. Benchmark USA reserves the right to determine whether the terms of this warranty have been properly complied with. In the event that the terms are not complied with, Benchmark USA shall be under no obligation to honor this warranty.